
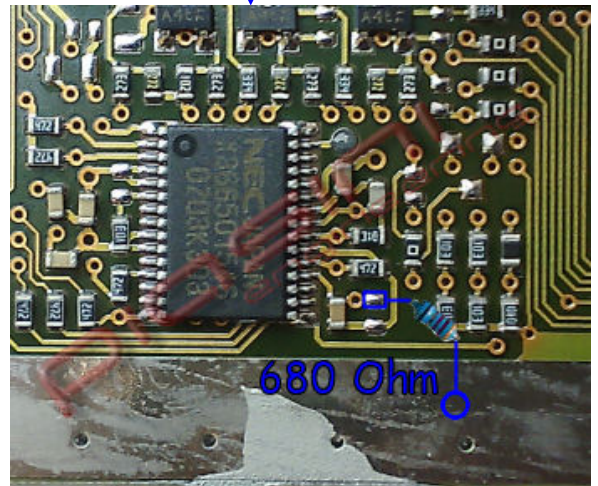
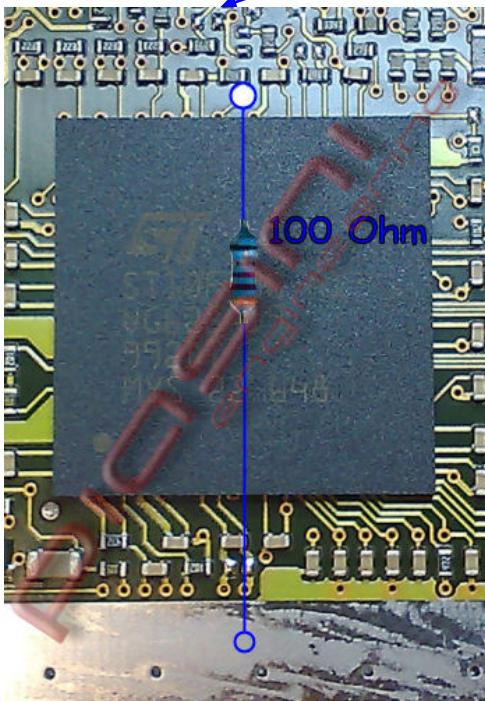


Bootstrap's Pin:

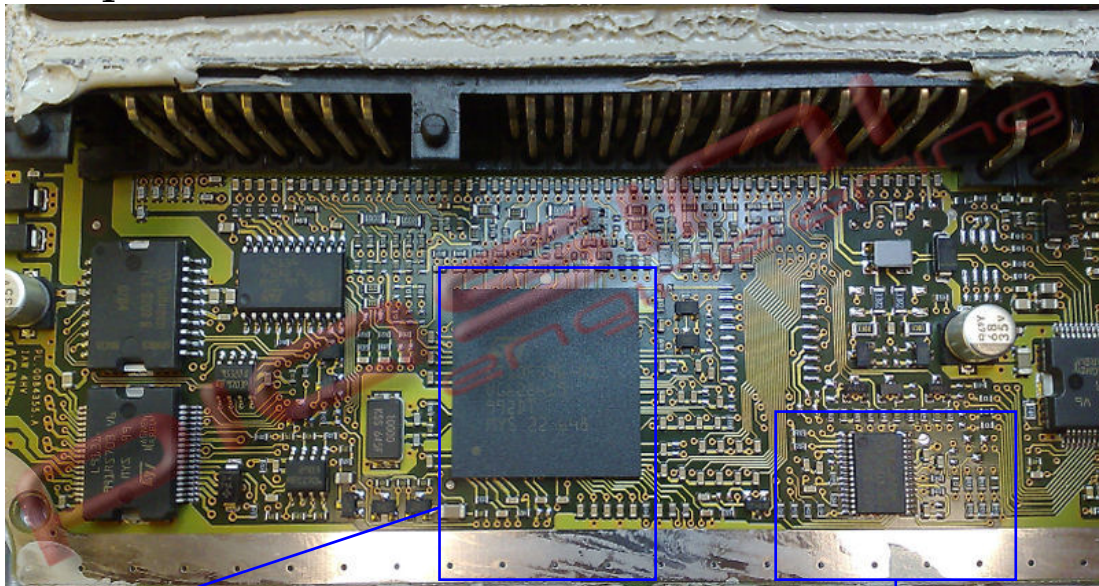

Connect the 2 resistor (100 Ohm, 680OHM) like in the picture, then ECU is in Bootstrap's Mode.