




ECU : MAGNETIMARELLI IAW-4TV


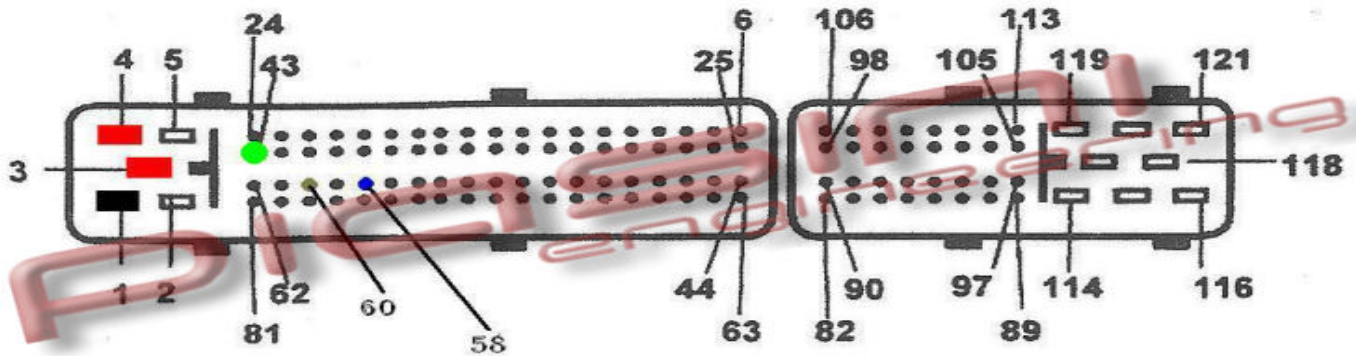


Pin out - Front view :

- Pin 01 Ground
- Pin 03 Power Supply
- Pin 04 Ignition



- Pin 43 K Line
- Pin 58 CAN L
- Pin 60 CAN H

Enable's Pin:

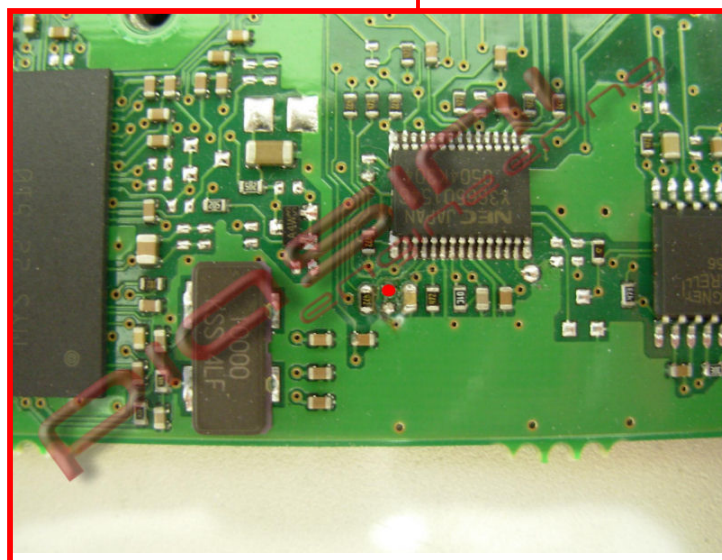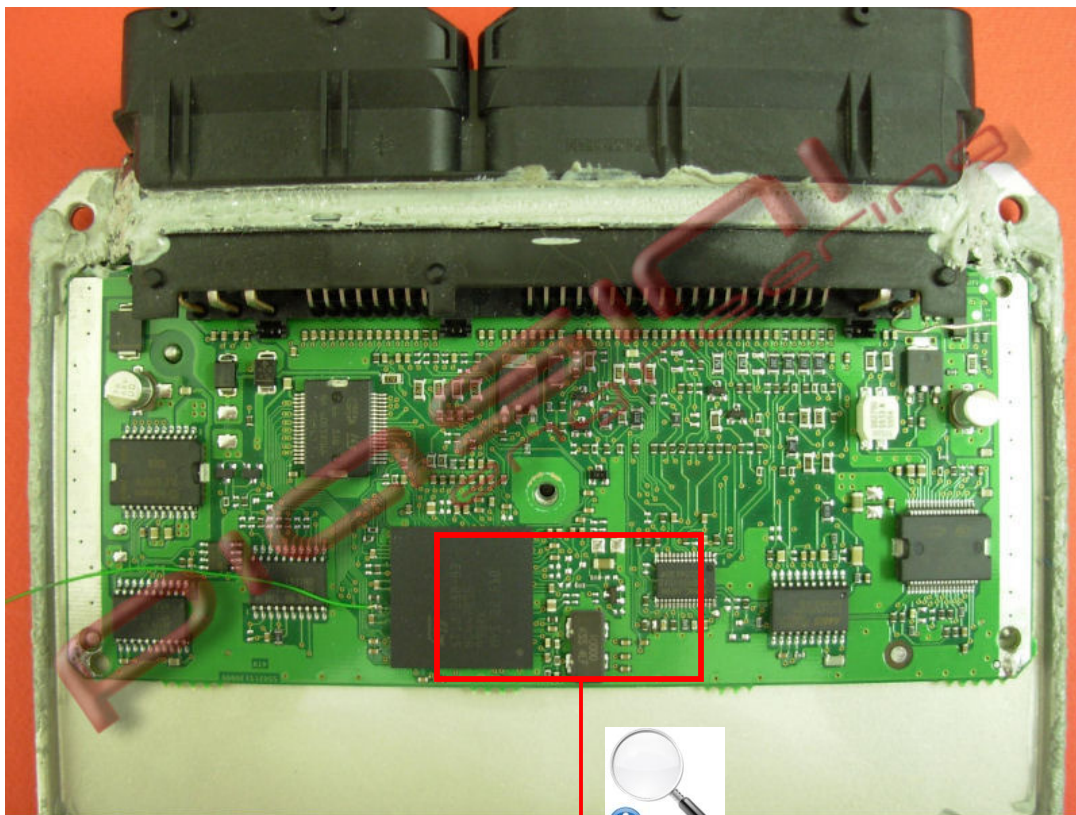

This is the Enable's Pin, that you have to connect to the ground, after this you can read the ECU.

BootStrap's Pin:

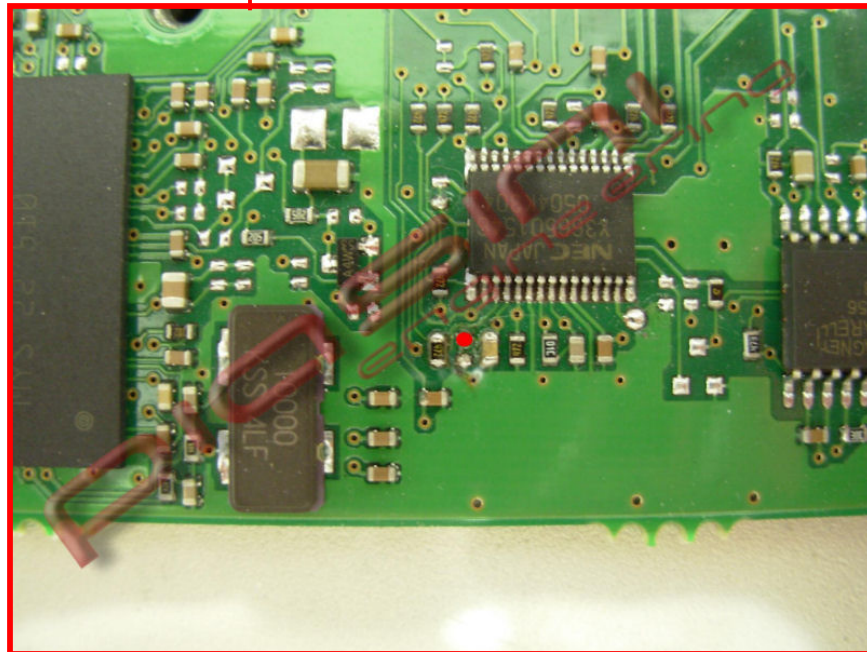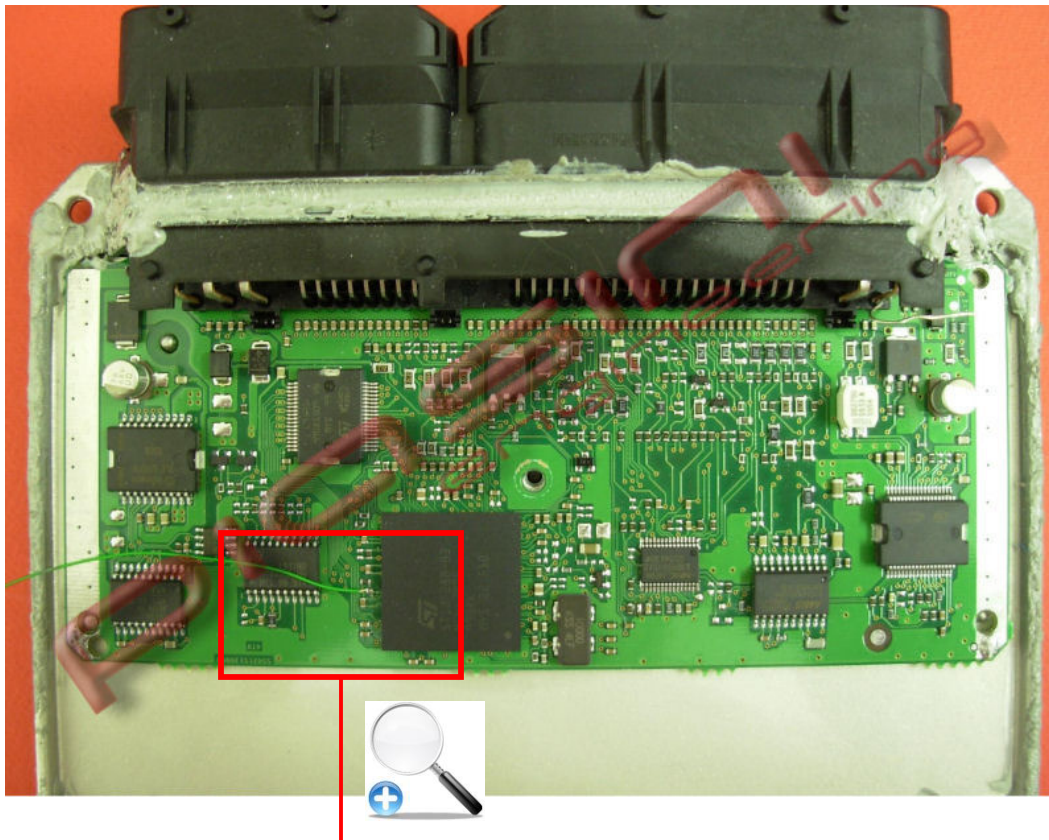

This is the BootStrap's Pin, you have to connect to the ground to qualify the reading of ECU, then supply the ECU and when you click on the Identify Button remove this pin from the ground