



# PIASINI

engineering

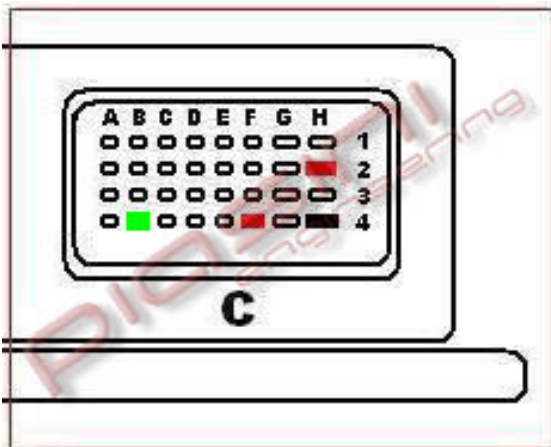

ECU : PSA\_1616v\_Me7.4.5


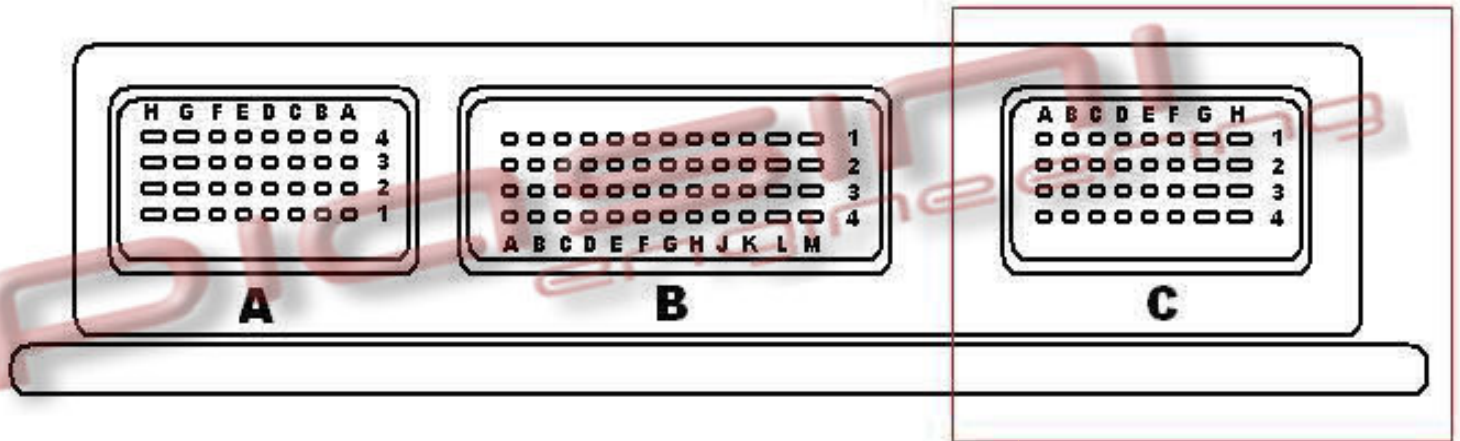


Pin out - Front view :

### Plug C:

- Pin H2            Power Supply
- Pin F4            Ignition
- Pin H4            Ground
- Pin B4            K Line

## BootStrap's mode:

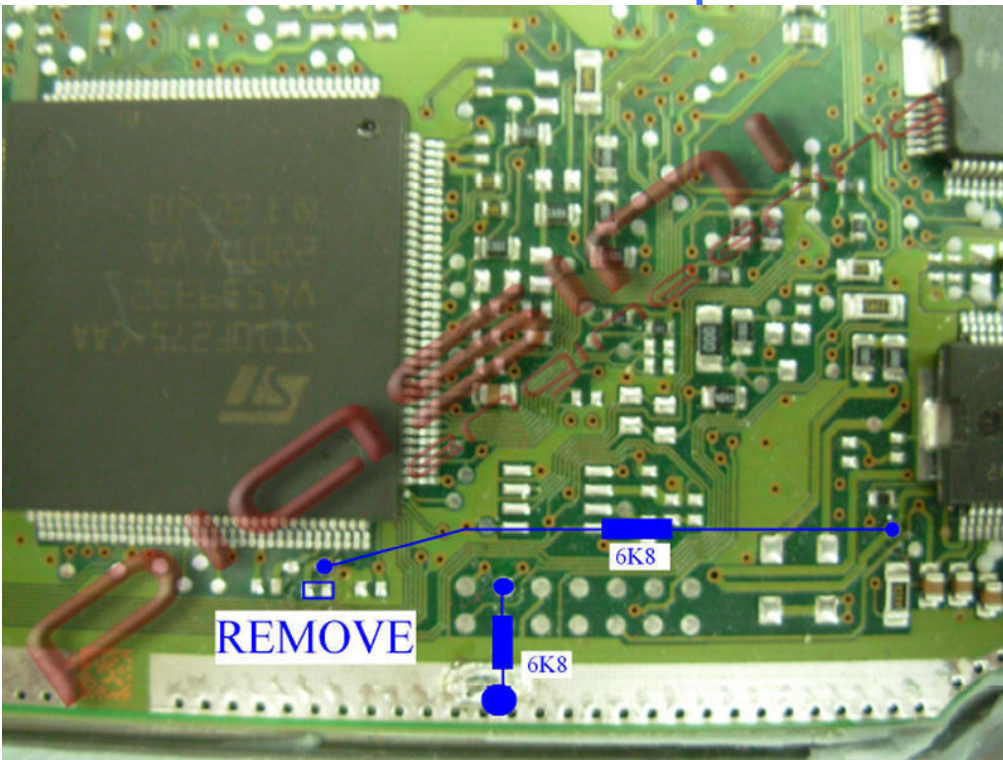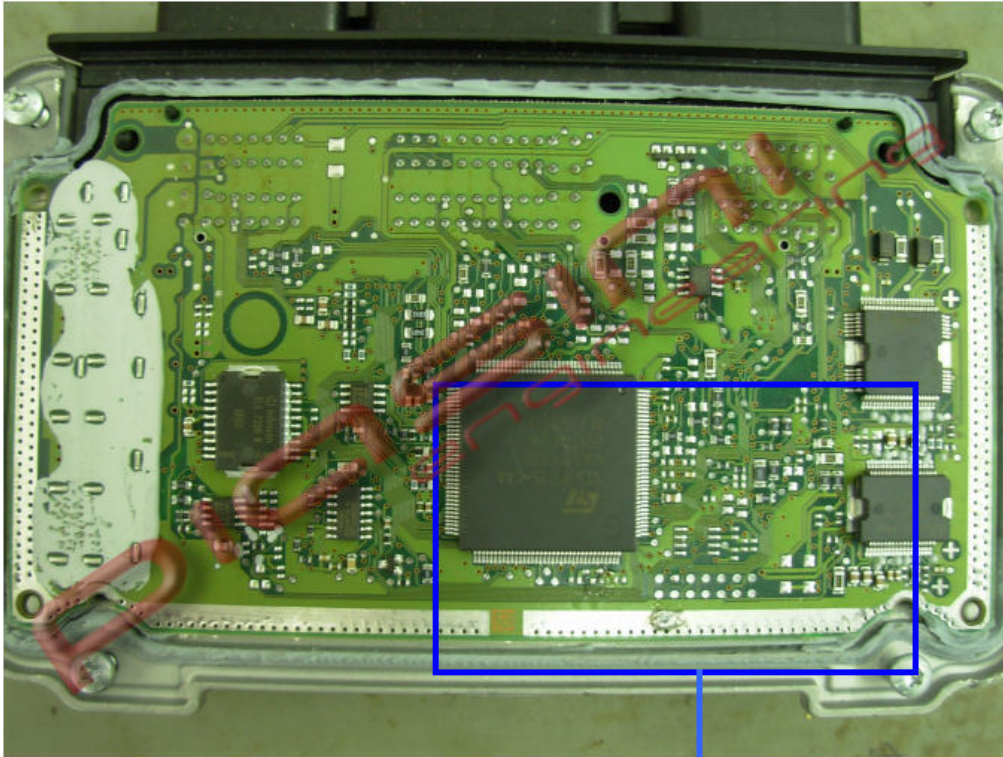

You have to put 2 resistor (6K8) for the boot mode and remove 1 resistor on the ECU.