


# PIASINI engineering



**ECU :** MAGNETIMARELLI IAW-4AF ST 168


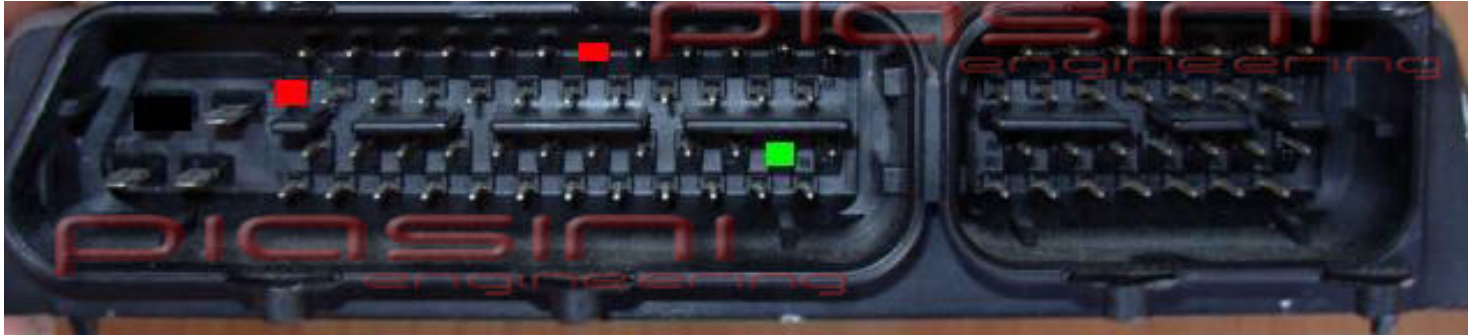


**Pin out - Front view :**

**Plug :**

- Pin 27                      Ground
- Pin 29                      Power Supply
- Pin 47                      Power Supply
- Pin 25                      K Line

## BootStrap's Pin:

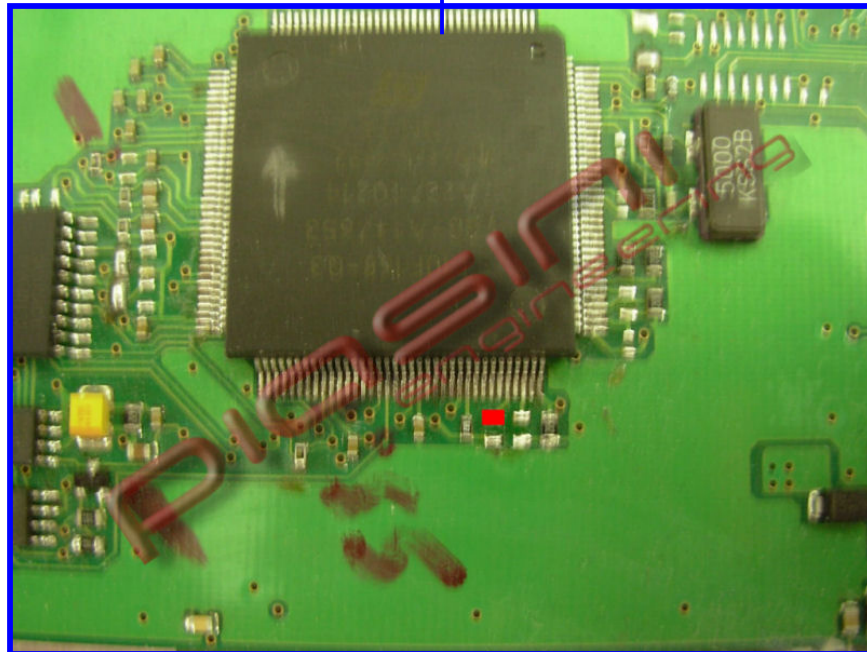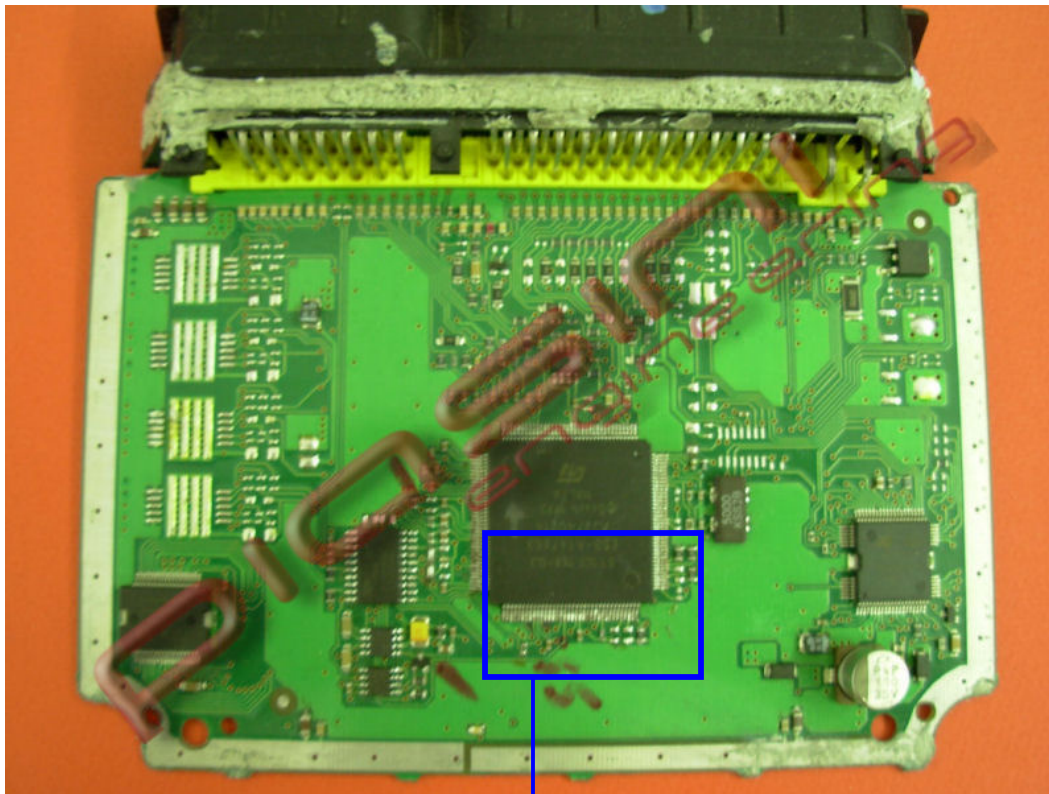

This is the BootStrap's Pin, you have to connect to the ground to qualify the reading of ECU, then supply the ECU and when you click on the Identify Button remove this pin from the ground