



Connect as below:

Serial Suite:

ECU Plug:

Red	to	5 Pin Red	(Power Supply +12 Volt)
Black	to	2 Pin Black	(Ground)
Green	to	1 Pin Green	(K Line)
Blue	to	1 Pin Blue	(Boot pin)

