


PRESA DIAGNOSI SU AUTO EOBD2 PLUG EOBD2 CAR DIAGNOSE

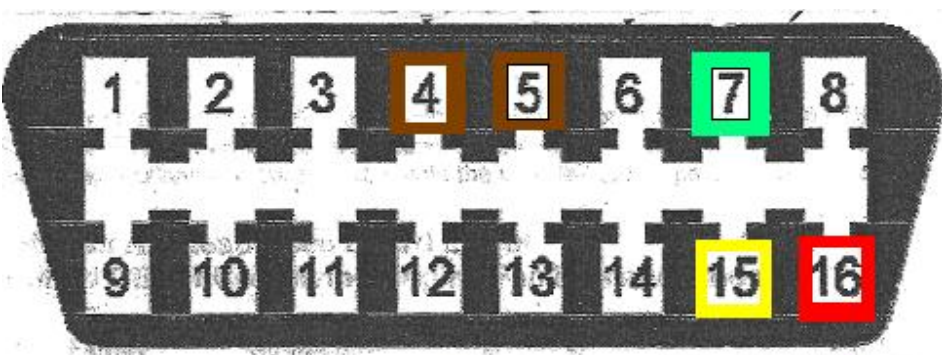

PIN 2 - +J1850 BUS HIGH FORD GM
+J1708 BUS 485 HIGH RENAULT VOLVO TRUCK

PIN 4 - CHASSIS GROUND

PIN 5 - SIGNAL GROUND

PIN 6 - +CAN HIGH (J-2284)

PIN 7 - ISO 9141-2 K LINE


PIN 10 - -J1850 BUS LOW FORD GM

-J1708 BUS 485 LOW RENAULT VOLVO TRUCK

PIN 14 - -CAN LOW (J-2284)

PIN 15 - ISO 9141-2 L LINE

PIN 16 - BATTERY +12V

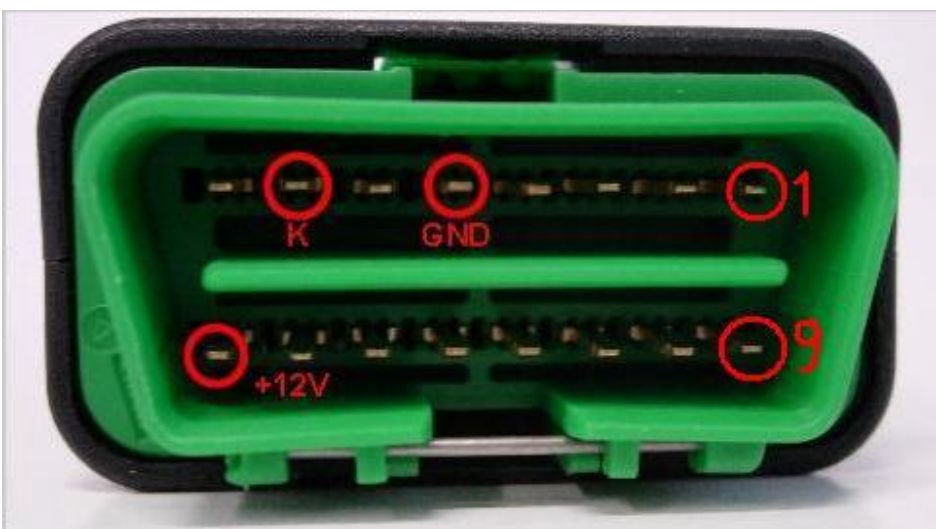

PRESA DIAGNOSI PLUG DIAGNOSE